

# Fulltone Supa-Trem 2

## Quick Guide

applies to V1.2 serial #760 and higher.

Functions only when running stereo!

Turn full CW to pan between the 2 amps like a stereo Rhodes Piano. Turn full CCW and both amps will throb at the same time..like a standard Tremolo. Try 12 O'clock for a very 3D mixture of the two!

Controls the Volume ONLY when pedal is turned ON

Turn Clockwise (CW) to Increase effect intensity...Turn full Counter Clockwise (CCW) to use pedal as a clean Booster

Determines the Speed of the Modulation

Waveforms:  
select "Sine" for a natural smooth feel.  
Select "Warble" for a more organic, slightly loping Leslie speaker feel. Select "Square" for abrupt choppy, stuttering sounds



Turns the pedal ON & OFF

This footswitch overrides the Rate knob and determines the Speed, just Tap twice to the beat of the music. It only takes 2 quick taps to set the tempo.

**Cool Feature Alert!** Hold this switch down for 3/4 of a second and the Rate will (first) double the speed perfectly, next time you hold it down for 3/4 second it will 1/2 the speed perfectly...right back to Rate you started at. Cool!



Plug Guitar into Input#1

\*only use Input#2 ONLY if you are coming out of a previous stereo device, in which case you would connect both OUTPUTS of that previous device to BOTH INPUTS of your ST-2

to AMP #1

to AMP #2